

## OVERHAUL

### HINT:

The installation procedures are the removal procedures in reverse order. However, only installation procedures requiring additional information are included.


#### 1. REMOVE BACK DOOR TRIM BOARD

(a) Using a clip remover, remove the 11 clips and cover.

#### 2. REMOVE BACK DOOR GARNISH OUTSIDE (See page 76-12)

#### 3. REMOVE CENTER STOP LAMP ASSY (See page 65-18)

#### 4. REMOVE REAR WIPER MOTOR ASSY (See page 66-10)

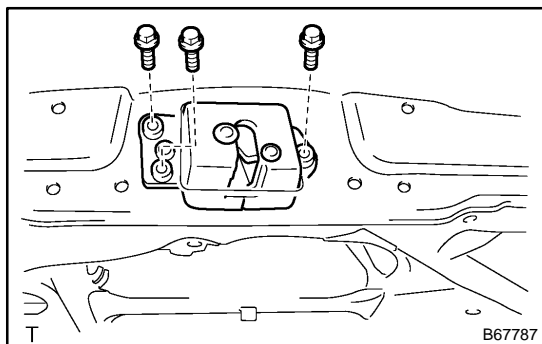

#### 5. REMOVE BACK DOOR LOCK ASSY

(a) Disconnect the door lock connector.

(b) Remove the 3 bolts and door lock.

### HINT:

Remove the door lock through the service hole.

#### 6. REMOVE BACK WINDOW GLASS CHANNEL LH

(a) Using a clip remover, remove the 2 clips.

(b) Using a heat light, heat the channel.

**Heating temperature: 20 to 30°C (68 to 86°F)**

### NOTICE:

**Do not heat the body and channel excessively.**


(c) Using a screwdriver, remove the channel.

### HINT:

Tape the screwdriver tip before use.

#### 7. REMOVE BACK WINDOW GLASS CHANNEL RH

(a) Use the same procedures on the RH side as on the LH side.

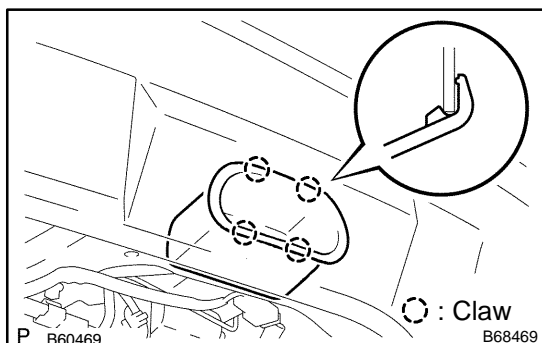

#### 8. REMOVE DOOR PULL HANDLE

(a) Using a screwdriver, disengage the 4 claws and remove the pull handle.

### HINT:

Tape the screwdriver tip before use.

#### 9. REMOVE BACK DOOR STAY SUB-ASSY LH (See page 75-35)

#### 10. REMOVE BACK DOOR STAY SUB-ASSY RH (See page 75-35)

#### 11. REMOVE BACK DOOR STOPPER LOWER

(a) Remove the bolt and stopper LH and RH.

**12. INSTALL BACK DOOR STOPPER LOWER**

- (a) Install the stopper LH and RH with the bolt.

**Torque: 12.5 N·m (112 kgf·cm, 9 ft·lbf)****13. INSTALL BACK WINDOW GLASS CHANNEL LH**

- (a) Clean the contact surface of the door with shop rag saturated with white gasoline.
- 
- (b) Using a heat light, heat the door and new channel.

**Heating temperature:**


Item	Temperature
Door	40 to 60°C (104 to 140°F)
Channel	20 to 30°C (68 to 86°F)

**NOTICE:****Do not heat the door and channel excessively.**

- (c) Remove peeling paper from the channel face.
- 
- (d) Install the channel and 2 clips.

**14. INSTALL BACK WINDOW GLASS CHANNEL RH**

- (a) Use the same procedures on the RH side as on the LH side.

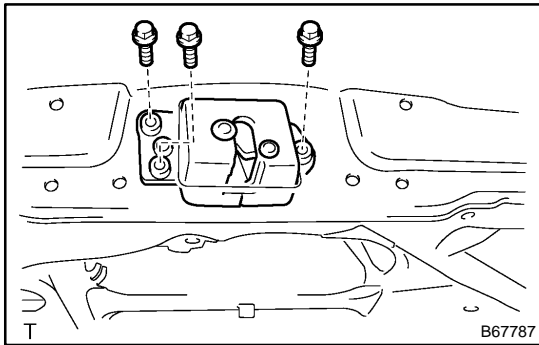**15. INSTALL BACK DOOR LOCK ASSY**

- (a) Install the door lock with the 3 bolts.
- 
- Torque: 12.5 N·m (112 kgf·cm, 9 ft·lbf)**
- 
- (b) Connect the door lock connector.