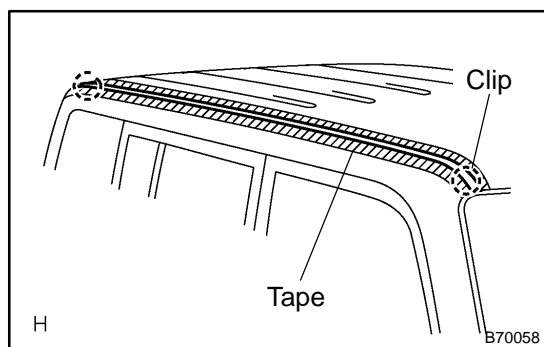


# ROOF DRIP SIDE FINISH MOULDING LH REPLACEMENT

760ZM-01

**HINT:**

Use the same procedures for the RH side and LH side.

**1. REMOVE ROOF DRIP SIDE FINISH MOULDING LH**

- (a) Put the protective tape the circumference of the moulding.
- (b) Using a moulding remover, disengage the clips both in the front and rear ends of the moulding, and then remove the moulding.

**NOTICE:**

- Do not remove the clips.
- If the clips are damaged or removed accidentally, exchange them for supplied clips.

**2. INSTALL ROOF DRIP SIDE FINISH MOULDING LH****NOTICE:****Only when exchanging the clips.**

- (a) Remove the tape that remains on the mounting surface of the body, and then clean the surface with white gasoline.
- (b) Using a heat light, heat the clip installation surfaces of the body and moulding.

**Heating temperature:**

Item	Temperature
Body	40 to 60°C (104 to 140°F)
Moulding	20 to 30°C (68 to 86°F)

**NOTICE:****Do not heat the moulding and body excessively.**

- (c) Set the supplied clips in the positions as shown in the illustration and press-fit those clips by hand to install them.

**NOTICE:**

**The installation of the moulding should be carried out when 30 minutes or more have passed after press-fitting the clips.**

**HINT:**

- Initial hardening time: 30 minutes
- Perfect hardening time: 24 hours

