

DTC	B0135/73	SHORT IN P/T SQUIB (LH) CIRCUIT
------------	-----------------	----------------------------------------

CIRCUIT DESCRIPTION


The P/T squib LH circuit consists of the airbag sensor assy center and the front seat outer belt assy LH (seat belt pretensioner LH).

This circuit instructs the SRS to deploy when deployment conditions are met.

DTC B0135/73 is recorded when a short circuit is detected in the P/T squib LH circuit.

DTC No.	DTC Detecting Condition	Trouble Area
B0135/73	<ul style="list-style-type: none"> • Short circuit between PL+ wire harness and PL- wire harness of P/T squib LH • P/T squib LH malfunction • Airbag sensor assy center malfunction 	<ul style="list-style-type: none"> • Front seat outer belt assy LH (P/T squib LH) • Airbag sensor assy center • Floor wire

WIRING DIAGRAM

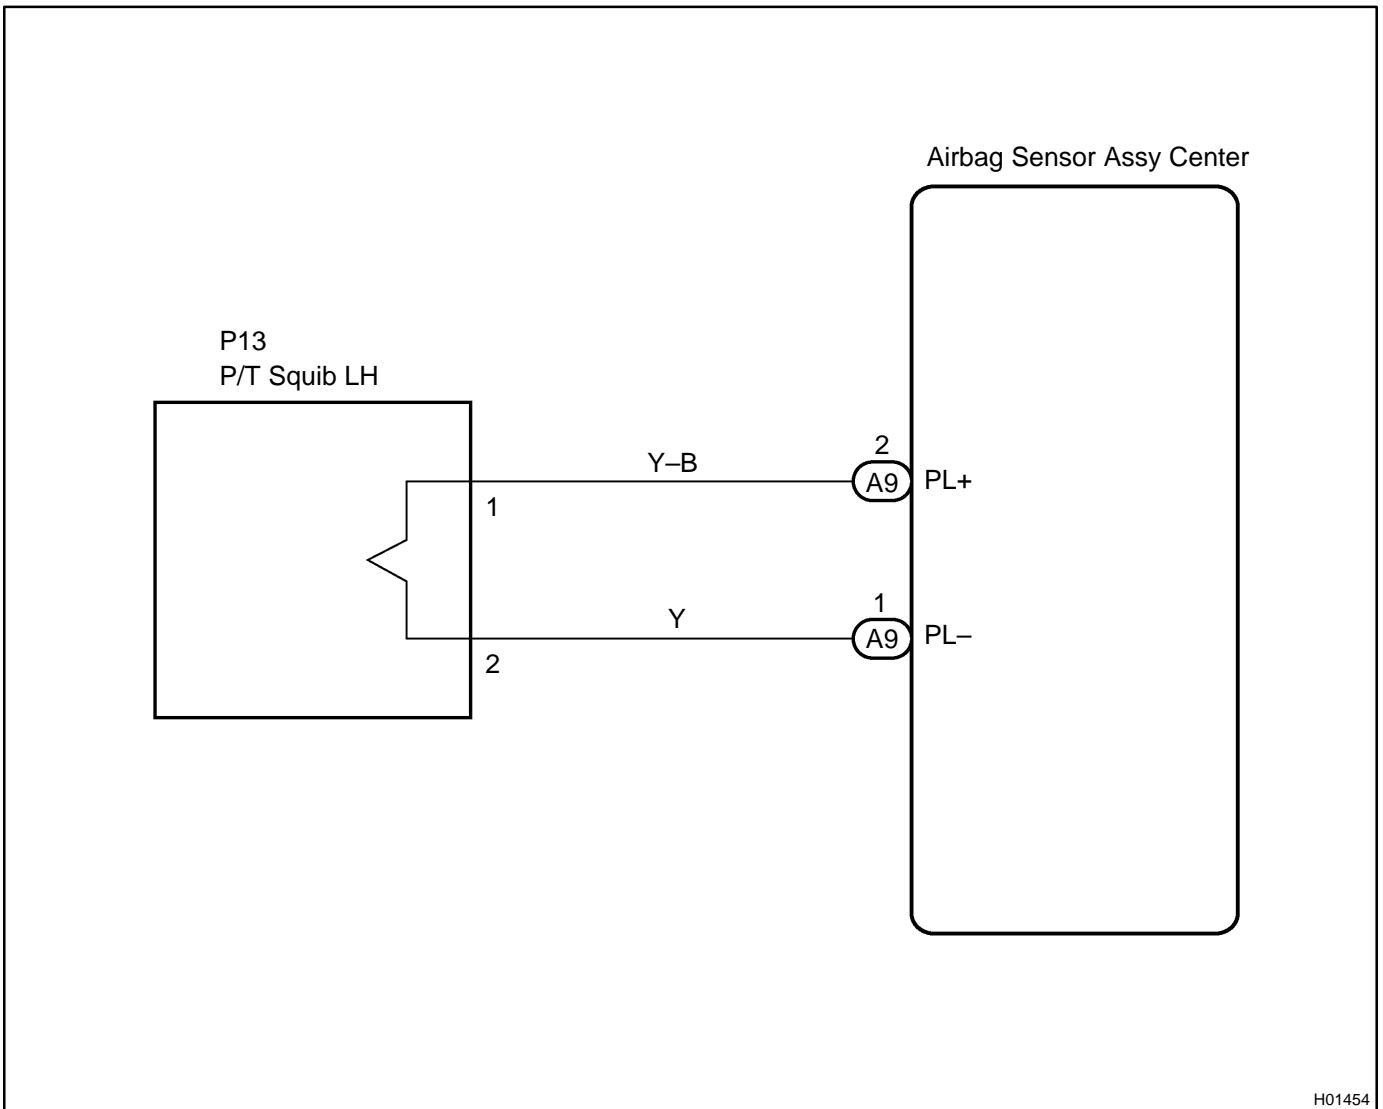

INSPECTION PROCEDURE

1 CHECK CONNECTOR

- (a) Turn the ignition switch to the LOCK position.
- (b) Disconnect the negative (-) terminal cable from the battery, and wait for at least 90 seconds.
- (c) Disconnect the connector from the front seat outer belt assy LH.
- (d) Check that the floor wire connector (on the front seat outer belt assy LH side) is not damaged.


OK:

The lock button is not disengaged, or the claw of the lock is not deformed or damaged.

NG REPAIR OR REPLACE FLOOR WIRE

OK

2 CHECK FLOOR WIRE(P/T SQUIB LH CIRCUIT)

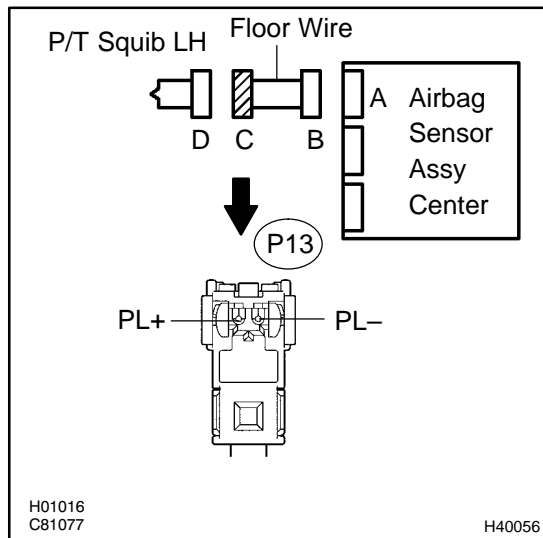

- (a) Disconnect the connector from the airbag sensor assy center.
- (b) Release the activation prevention mechanism built into connector "B" (See page 05-456).
- (c) Measure the resistance according to the value(s) in the table below.


Standard:

Tester connection (Connector "C")	Condition	Specified condition
P13-1 (PL+) - P13-2 (PL-)	Always	1 MΩ or Higher

NG REPAIR OR REPLACE FLOOR WIRE

OK

3 CHECK AIR BAG SENSOR ASSY CENTER

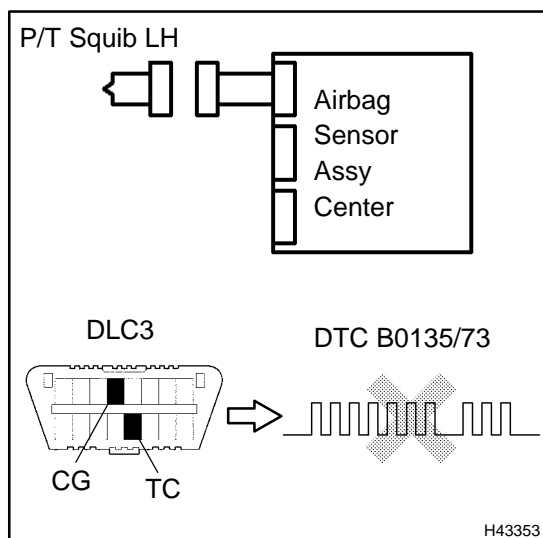

- Connect the connector to the airbag sensor assy center.
- Connect the negative (-) terminal cable to the battery, and wait for at least 2 seconds.
- Turn the ignition switch to the ON position, and wait for at least 60 seconds.
- Clear the stored DTCs in the memory (See page [05-453](#)).
- Turn the ignition switch to the LOCK position.
- Turn the ignition switch to the ON position, and wait for at least 60 seconds.
- Check the DTCs (See page [05-453](#)).

OK:

DTC B0135/73 is not output.

HINT:


Codes other than code B0135/73 may be output at this time, but they are not related to this check.

NG →

REPLACE AIR BAG SENSOR ASSY CENTER

OK

4 CHECK FRONT SEAT OUTER BELT ASSY LH(P/T SQUIB LH)

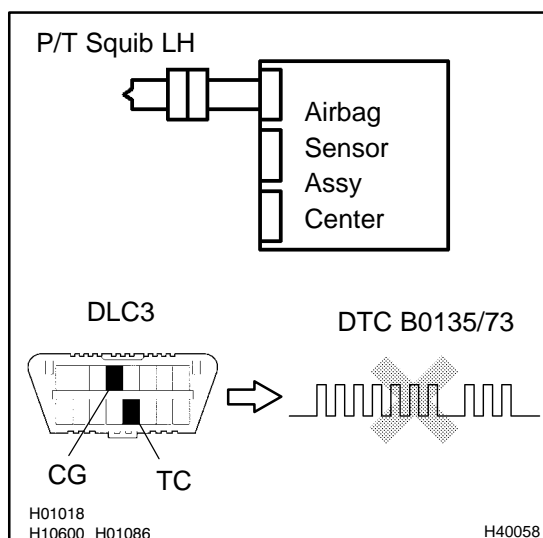

- Turn the ignition switch to the LOCK position.
- Disconnect the negative (-) terminal cable from the battery, and wait for at least 90 seconds.
- Connect the connector to the front seat outer belt assy LH.
- Connect the negative (-) terminal cable to the battery, and wait for at least 2 seconds.
- Turn the ignition switch to the ON position, and wait for at least 60 seconds.
- Clear the stored DTCs in the memory (See page [05-453](#)).
- Turn the ignition switch to the LOCK position.
- Turn the ignition switch to the ON position, and wait for at least 60 seconds.
- Check the DTCs (See page [05-453](#)).

OK:

DTC B0135/73 is not output.

HINT:

Codes other than code B0135/73 may be output at this time, but they are not related to this check.

NG →

REPLACE FRONT SEAT OUTER BELT ASSY LH

OK

USE SIMULATION METHOD TO CHECK