

<b>DTC</b>	<b>B0133/62</b>	<b>SHORT IN P/T SQUIB (RH) CIRCUIT (TO B+)</b>
------------	-----------------	--

### CIRCUIT DESCRIPTION

The P/T squib RH circuit consists of the airbag sensor assy center and the front seat outer belt assy RH (seat belt pretensioner RH).

This circuit instructs the SRS to deploy when deployment conditions are met.

DTC B0133/62 is recorded when a short to B+ is detected in the P/T squib RH circuit.


DTC No.	DTC Detecting Condition	Trouble Area
B0133/62	<ul style="list-style-type: none"> <li>• Short circuit in P/T squib RH wire harness (to B+)</li> <li>• P/T squib RH malfunction</li> <li>• Airbag sensor assy center malfunction</li> </ul>	<ul style="list-style-type: none"> <li>• Front seat outer belt assy RH (P/T squib RH)</li> <li>• Airbag sensor assy center</li> <li>• Floor wire</li> </ul>

### WIRING DIAGRAM

See page 05-501.

### INSPECTION PROCEDURE

<b>1</b>	<b>CHECK FLOOR WIRE(P/T SQUIB RH CIRCUIT)</b>
----------	---

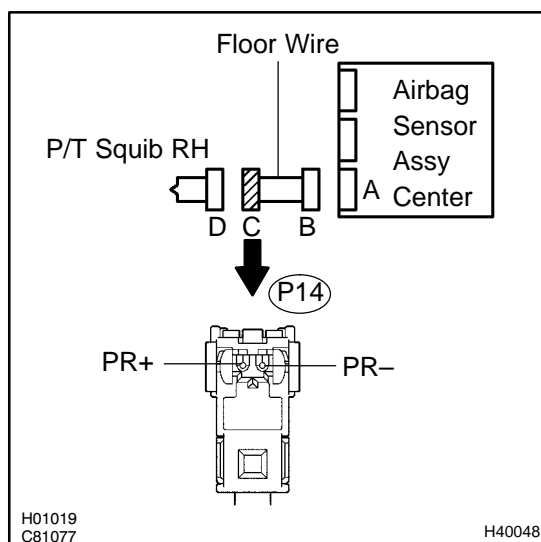

- (a) Turn the ignition switch to the LOCK position.
- (b) Disconnect the negative (-) terminal cable from the battery, and wait for at least 90 seconds.
- (c) Disconnect the connectors from the airbag sensor assy center and the front seat outer belt assy RH.
- (d) Connect the negative (-) terminal cable to the battery, and wait for at least 2 seconds.
- (e) Measure the voltage according to the value(s) in the table below.


**Standard:**

Tester connection (Connector "C")	Condition	Specified condition
P14-1 (PR+) - Body ground	Ignition switch ON	Below 1 V
P14-2 (PR-) - Body ground	Ignition switch ON	Below 1 V

<b>NG</b>	<b>REPAIR OR REPLACE FLOOR WIRE</b>
-----------	-------------------------------------

**OK**

**2 CHECK AIR BAG SENSOR ASSY CENTER**

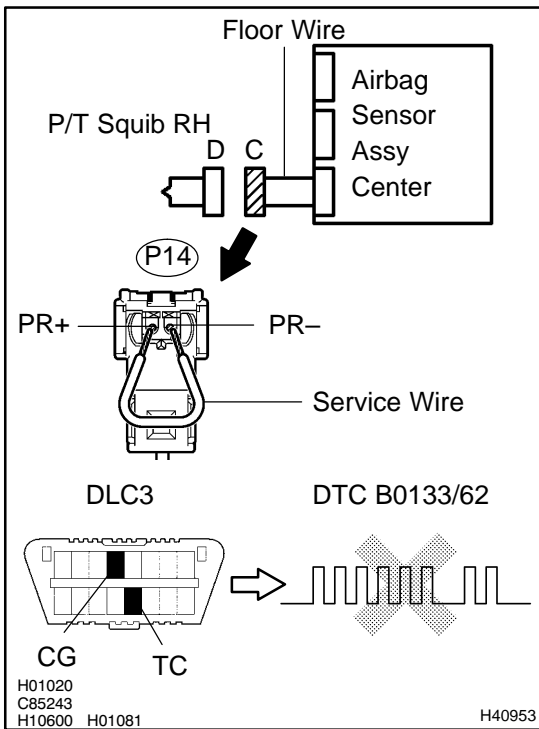

- (a) Turn the ignition switch to the LOCK position.
- (b) Disconnect the negative (-) terminal cable from the battery, and wait for at least 90 seconds.
- (c) Connect the connector to the airbag sensor assy center.
- (d) Using a service wire, connect terminals PR+ and PR- of connector "C".

**NOTICE:**

- **Twist the end of the service wire in order to insert to the connector.**
  - **Do not forcibly insert the twisted service wire into the terminals of the connector when connecting.**
- (e) Connect the negative (-) terminal cable to the battery, and wait for at least 2 seconds.
  - (f) Turn the ignition switch to the ON position, and wait for at least 60 seconds.
  - (g) Clear the stored DTCs in the memory (See page 05-453).
  - (h) Turn the ignition switch to the LOCK position.
  - (i) Turn the ignition switch to the ON position, and wait for at least 60 seconds.
  - (j) Check the DTCs (See page 05-453).

**OK:**

**DTC B0133/62 is not output.**


**HINT:**

Codes other than code B0133/62 may be output at this time, but they are not related to this check.

**NG** **REPLACE AIR BAG SENSOR ASSY CENTER**

**OK**

### 3 CHECK FRONT SEAT OUTER BELT ASSY RH(P/T SQUIB RH)

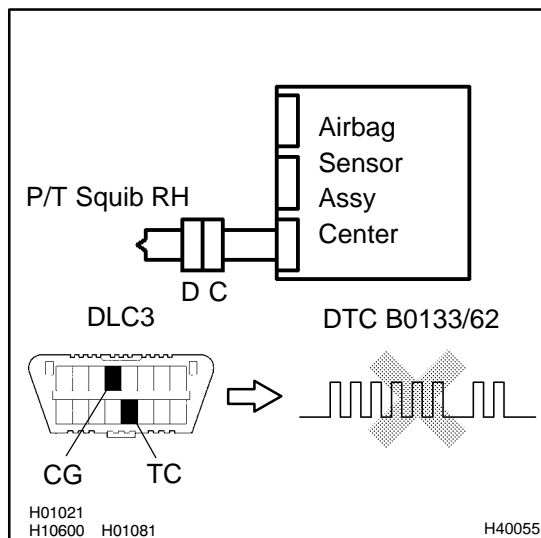

- Turn the ignition switch to the LOCK position.
- Disconnect the negative (-) terminal cable from the battery, and wait for at least 90 seconds.
- Disconnect the service wire from the connector "C".
- Connect the connector to the front seat outer belt assy RH.
- Connect the negative (-) terminal cable to the battery, and wait for at least 2 seconds.
- Turn the ignition switch to the ON position, and wait for at least 60 seconds.
- Clear the stored DTCs in the memory (See page [05-453](#)).
- Turn the ignition switch to the LOCK position.
- Turn the ignition switch to the ON position, and wait for at least 60 seconds.
- Check the DTCs (See page [05-453](#)).

**OK:**

**DTC B0133/62 is not output.**

**HINT:**

Codes other than code B0133/62 may be output at this time, but they are not related to this check.

**NG** →

**REPLACE FRONT SEAT OUTER BELT ASSY RH**

**OK**

### 4 USE SIMULATION METHOD TO CHECK

**NG** →

**Go to step 1**

**OK**

**REPLACE ALL SRS COMPONENTS INCLUDING WIRE HARNESS**