

<b>DTC</b>	<b>B0130/63</b>	<b>SHORT IN P/T SQUIB (RH) CIRCUIT</b>
------------	-----------------	--

**CIRCUIT DESCRIPTION**


The P/T squib RH circuit consists of the airbag sensor assy center and the front seat outer belt assy RH (seat belt pretensioner RH).

This circuit instructs the SRS to deploy when deployment conditions are met.

DTC B0130/63 is recorded when a short circuit is detected in the P/T squib RH circuit.

DTC No.	DTC Detecting Condition	Trouble Area
B0130/63	<ul style="list-style-type: none"> <li>• Short circuit between PR+ wire harness and PR- wire harness of P/T squib RH</li> <li>• P/T squib RH malfunction</li> <li>• Airbag sensor assy center malfunction</li> </ul>	<ul style="list-style-type: none"> <li>• Front seat outer belt assy RH (P/T squib RH)</li> <li>• Airbag sensor assy center</li> <li>• Floor wire</li> </ul>

**WIRING DIAGRAM**

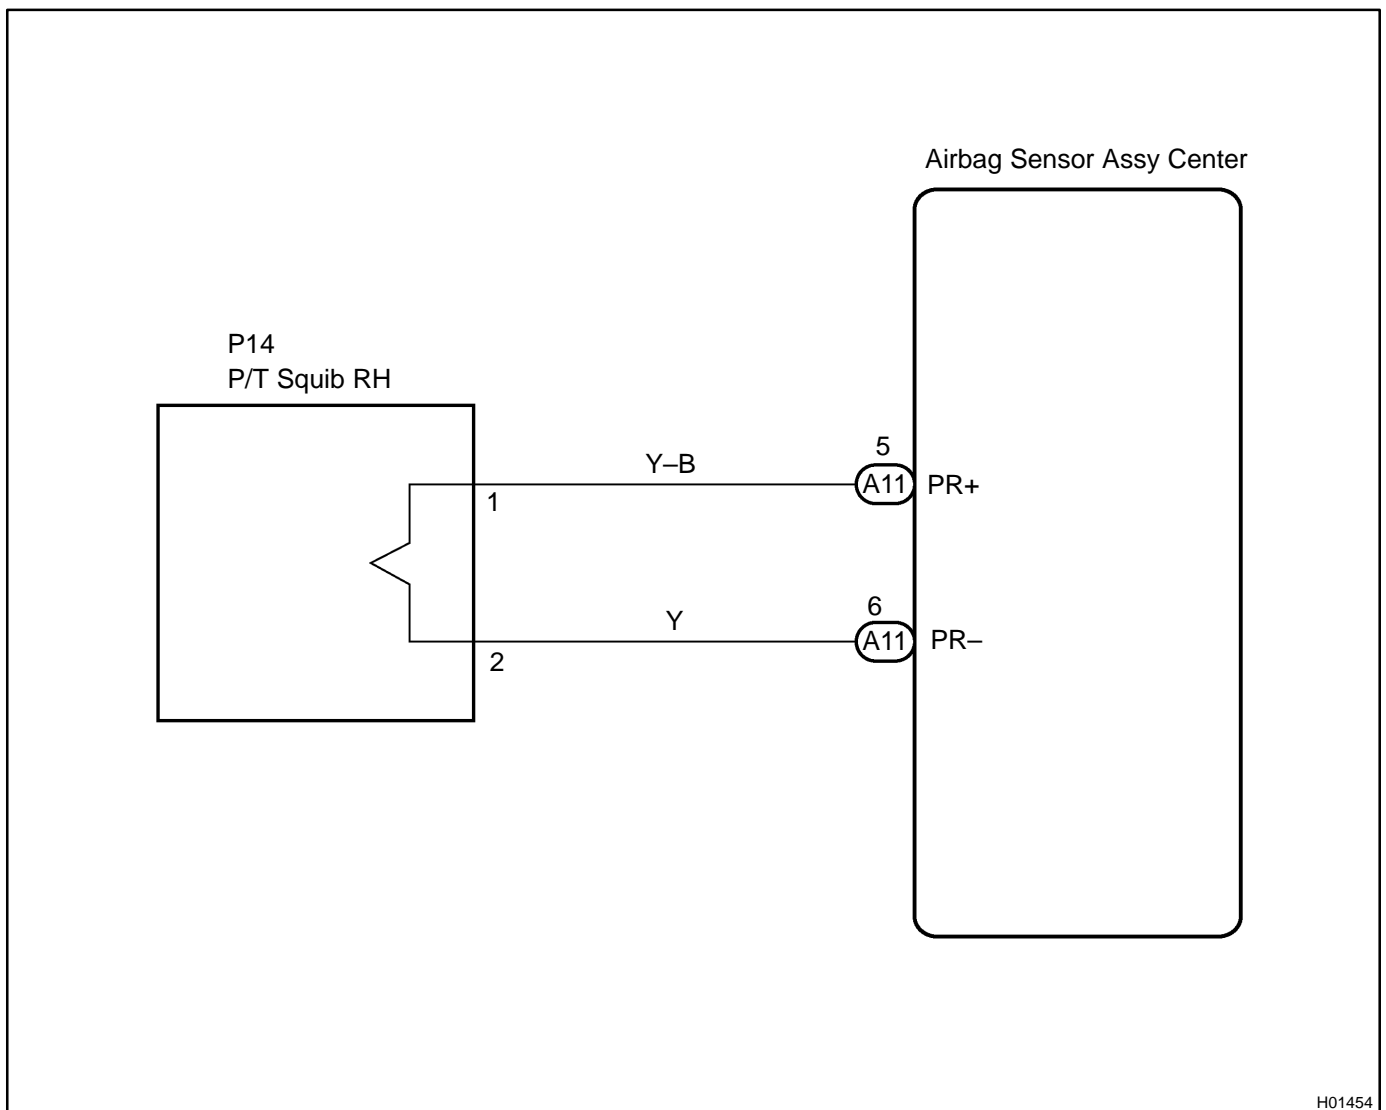

## INSPECTION PROCEDURE

### 1 CHECK CONNECTOR

- (a) Turn the ignition switch to the LOCK position.
- (b) Disconnect the negative (-) terminal cable from the battery, and wait for at least 90 seconds.
- (c) Disconnect the connectors from the front seat outer belt assy RH.
- (d) Check that the floor wire connector (on the front seat outer belt assy RH side) is not damaged.


**OK:**

The lock button is not disengaged, or the claw of the lock is not deformed or damaged.

**NG** REPAIR OR REPLACE FLOOR WIRE

**OK**

### 2 CHECK FLOOR WIRE(P/T SQUIB RH CIRCUIT)

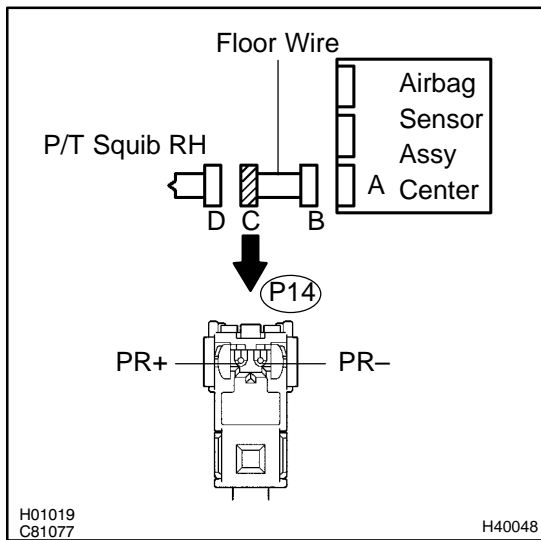

- (a) Disconnect the connectors from the airbag sensor assy center.
- (b) Release the activation prevention mechanism built into connector "B" (See page 05-456).
- (c) Measure the resistance according to the value(s) in the table below.


**Standard:**

Tester connection (Connector "C")	Condition	Specified condition
P14-1 (PR+) - P14-2 (PR-)	Always	1 MΩ or Higher

**NG** REPAIR OR REPLACE FLOOR WIRE

**OK**

### 3 CHECK AIR BAG SENSOR ASSY CENTER

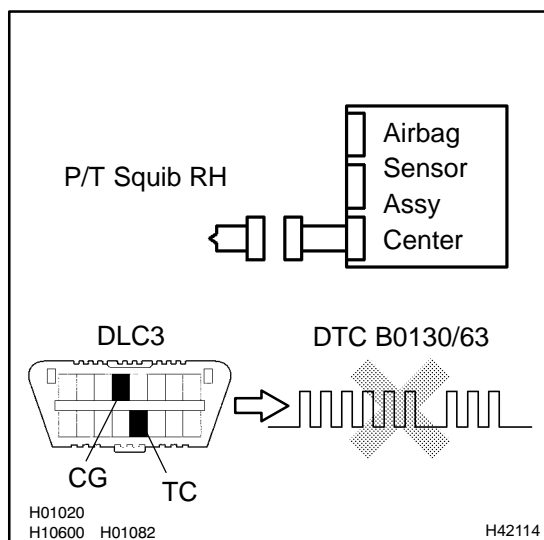

- Connect the connector to the airbag sensor assy center.
- Connect the negative (-) terminal cable to the battery, and wait for at least 2 seconds.
- Turn the ignition switch to the ON position, and wait for at least 60 seconds.
- Clear the stored DTCs in the memory (See page [05-453](#)).
- Turn the ignition switch to the LOCK position.
- Turn the ignition switch to the ON position, and wait for at least 60 seconds.
- Check the DTCs (See page [05-453](#)).

**OK:**

**DTC B0130/63 is not output.**

**HINT:**


Codes other than code B0130/63 may be output at this time, but they are not related to this check.

**NG**

**REPLACE AIR BAG SENSOR ASSY CENTER**

**OK**

### 4 CHECK FRONT SEAT OUTER BELT ASSY RH(P/T SQUIB RH)

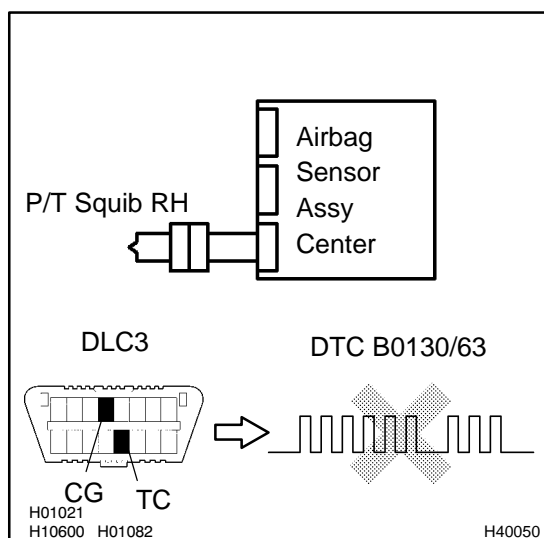

- Turn the ignition switch to the LOCK position.
- Disconnect the negative (-) terminal cable from the battery, and wait for at least 90 seconds.
- Connect the connector to the front seat outer belt assy RH.
- Connect the negative (-) terminal cable to the battery, and wait for at least 2 seconds.
- Turn the ignition switch to the ON position, and wait for at least 60 seconds.
- Clear the stored DTCs in the memory (See page [05-453](#)).
- Turn the ignition switch to the LOCK position.
- Turn the ignition switch to the ON position, and wait for at least 60 seconds.
- Check the DTCs (See page [05-453](#)).

**OK:**

**DTC B0130/63 is not output.**

**HINT:**

Codes other than code B0130/63 may be output at this time, but they are not related to this check.

**NG**

**REPLACE FRONT SEAT OUTER BELT ASSY RH**

**OK**

### USE SIMULATION METHOD TO CHECK