

DTC	P0976	SHIFT SOLENOID "B" CONTROL CIRCUIT LOW (SHIFT SOLENOID VALVE S2)
------------	--------------	---

DTC	P0977	SHIFT SOLENOID "B" CONTROL CIRCUIT HIGH (SHIFT SOLENOID VALVE S2)
------------	--------------	--

CIRCUIT DESCRIPTION

See page [05-428](#).

DTC No.	DTC Detection Condition	Trouble Area
P0976	ECM detects short in solenoid valve S2 circuit 4 times when solenoid valve S2 is operated (1-trip detection logic)	<ul style="list-style-type: none"> • Short in shift solenoid valve S2 circuit • Shift solenoid valve S2 • ECM
P0977	ECM detects open in solenoid valve S2 circuit 4 times when solenoid valve S2 is not operated (1-trip detection logic)	<ul style="list-style-type: none"> • Open in shift solenoid valve S2 circuit • Shift solenoid valve S2 • ECM

MONITOR DESCRIPTION

The ECM commands gearshift by turning the shift solenoid valves "ON/OFF". When there is an open or short circuit in any shift solenoid valve circuit, the ECM detects the problem and the MIL comes on. Illuminating the MIL, the ECM performs the fail-safe and turns the other shift solenoid valves in good condition "ON/OFF" (In case of an open or short circuit, the ECM stops sending current to the circuit.).

MONITOR STRATEGY

Related DTCs	P0976	Shift solenoid "B"/Range check (Low resistance)
	P0977	Shift solenoid "B"/Range check (High resistance)
Required sensors/Components	Shift solenoid valve S2	
Frequency of operation	Continuous	
Duration	2 times or more	
MIL operation	Immediate	
Sequence of operation	None	

TYPICAL ENABLING CONDITIONS

Item	Specification	
	Minimum	Maximum
The monitor will run whenever the following DTCs are not present.	See page 05-389	
Range check (Low resistance)		
Solenoid	ON	
Time after solenoid OFF to ON	More than 0.008 sec.	–
Range check (High resistance)		
Solenoid	OFF	
Time after solenoid ON to OFF	More than 0.008 sec.	–


TYPICAL MALFUNCTION THRESHOLDS

Detection criteria	Threshold
Range check (Low resistance)	
Number of solenoid ON/OFF change with intelligent power MOS diagnosis signal failure (Fail at solenoid resistance $\leq 8 \Omega$)	4 times (0.064 sec.)
Range check (High resistance)	
Number of solenoid ON/OFF change with intelligent power MOS diagnosis signal failure (Fail at solenoid resistance $\geq 100 \text{ k}\Omega$)	4 times (0.064 sec.)

COMPONENT OPERATING RANGE


Parameter	Standard value
Shift solenoid valve S2 resistance	11 to 15 Ω at 20°C (68°F)

WIRING DIAGRAM

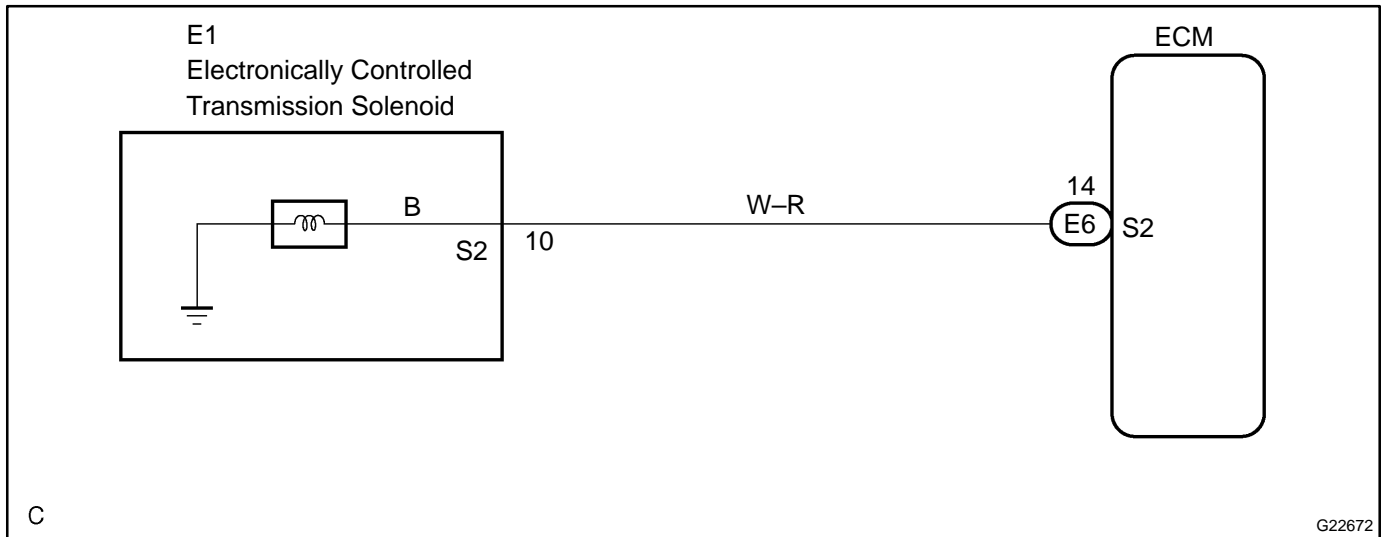

INSPECTION PROCEDURE

1 INSPECT TRANSMISSION WIRE(S2)

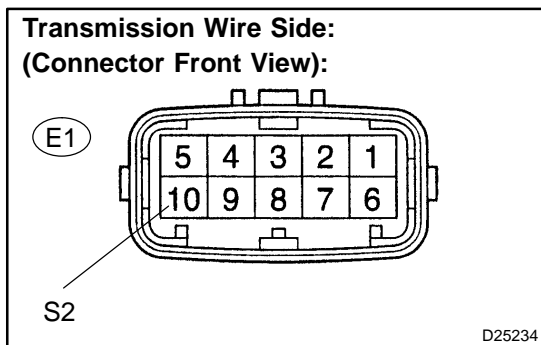

- Disconnect the transmission wire connector from the transaxle.
- Measure the resistance according to the value(s) in the table below.


Standard:

Tester Connection	Specified Condition 20 °C (68 °F)
10 – Body ground	11 to 15 Ω

NG → Go to step 3

OK

2 CHECK HARNESS AND CONNECTOR(TRANSMISSION WIRE – ECM)

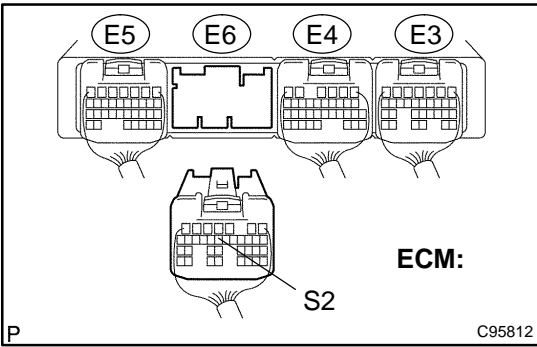

- (a) Connect the transmission connector to the transaxle.
- (b) Disconnect the connector from the ECM.
- (c) Measure the resistance according to the value(s) in the table below.

Standard:


Tester Connection	Specified Condition 20 °C (68 °F)
E6 – 14 (S2) – Body ground	11 to 15 Ω

NG → **REPAIR OR REPLACE HARNESS OR CONNECTOR (See page 01-30)**

OK

REPLACE ECM (See page 10-17)

3 INSPECT SHIFT SOLENOID VALVE(S2)

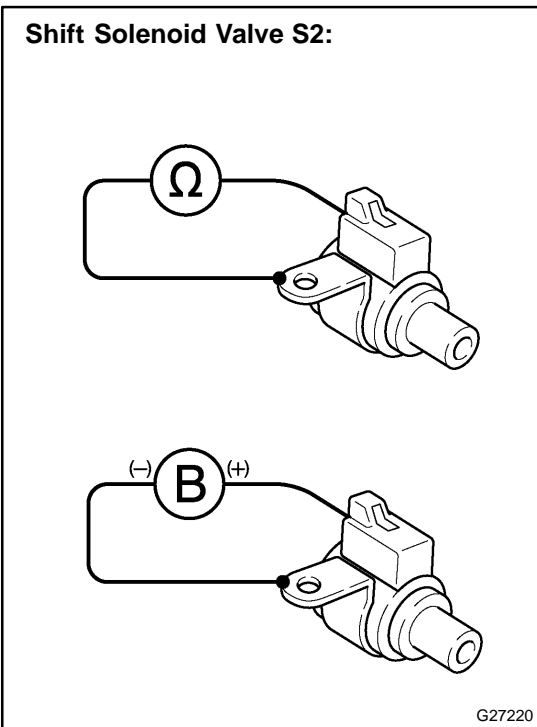

- (a) Remove the shift solenoid valve S2.
- (b) Measure the resistance according to the value(s) in the table below.

Standard:

Tester Connection	Specified Condition 20 °C (68 °F)
Solenoid Connector (S2) – Solenoid Body (S2)	11 to 15 Ω

- (c) Connect the positive (+) battery lead to the solenoid connector terminal, and the negative (-) battery lead to the solenoid body for checking the solenoid valve operation.

Standard:

The solenoid makes an operating noise.

NG → **REPLACE SHIFT SOLENOID VALVE(S2)**

OK

REPAIR OR REPLACE TRANSMISSION WIRE (See page 40-29)